# CNLEDU-PD Console for EDU-PD Teaching Multimedia Station

This document shows how to mount and dismount the console from the EDU-PD Teaching Multimedia Station.
As well as how to remove the wedge panel from the console.
Note: If you cannot understand these instructions or are concerned about safety of the installation, contact a qualified contractor or contact AVFI at 1-866-405-0655

Supplied Hardware

Plastic Three Arm Knob (2)

Supplied Parts
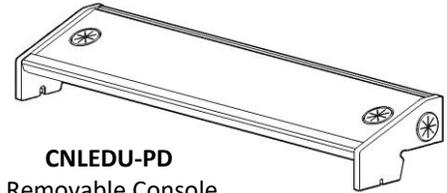
CNLEDU-PD
Removable Console

Insert the Console into the Plastic slots and tighten the plastic knobs on both sides.
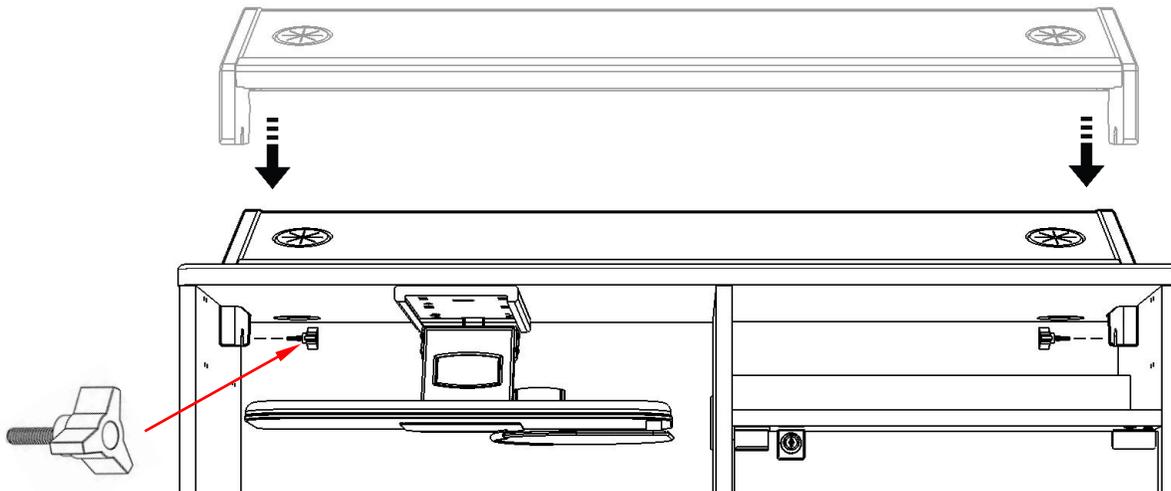
Reverse the procedure to mount back the console

---

4 To remove front console wedge panel, pull firm and evenly by holding the panel from the grommet holes. The fasteners will unlock.
Push in the same manner to reattach the panel.