



PM-HDCB

rev 2.0
Page 1 of 2

Mounting Instructions

Thank you for purchasing AVFI's High Definition Codec Bracket. This product was designed for mounting a single HD Codec to AVFI PM-S-FL, PM-XFL-D & PM-XFL-S display stands or for mounting on to/into a wooden or MDF cart or a wall.


Note: If you cannot understand these instructions or are concerned about safety of the installation Contact a qualified contractor or contact AVFI at 1-877-834-3876.

Confirm all hardware is included before you begin assembly.
Not all hardware supplied will be used depending on the manufacturer of your display/s.


Supplied Parts:



Hardware Bag
(1)

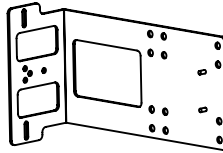


HDCB Bracket
(1)



HDCB Clamp
(1)

Supplied Hardware:




M8 X20
(4)



M8 NUT
(4)



Plastic Spacer
(2)

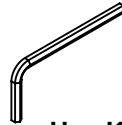

6mm Hex Key
(1)




10-32 Nut
(2)




10-32 Washers
(2)



3mm Washers
(2)


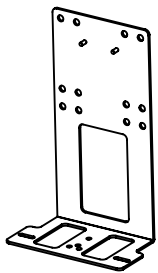


OR

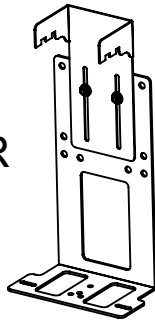



The Lifesize codec only requires a single piece mount.

If Using Polycom or Tandberg Codec, assemble the two pieces using the 10-32 nuts with washers. You want the two pieces to adjust later, so don't tighten the nuts.

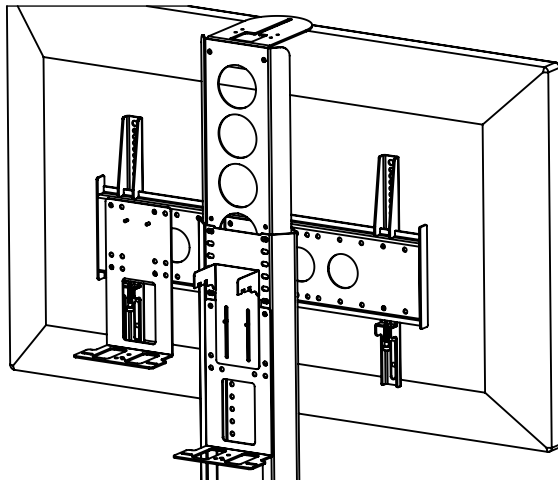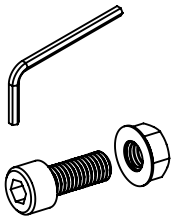

Attach the bracket in the desired position and location using the 4 nuts and bolts provided. Hand tighten the nut till its snug.

Place codec to confirm cable clearance before tightening completely.

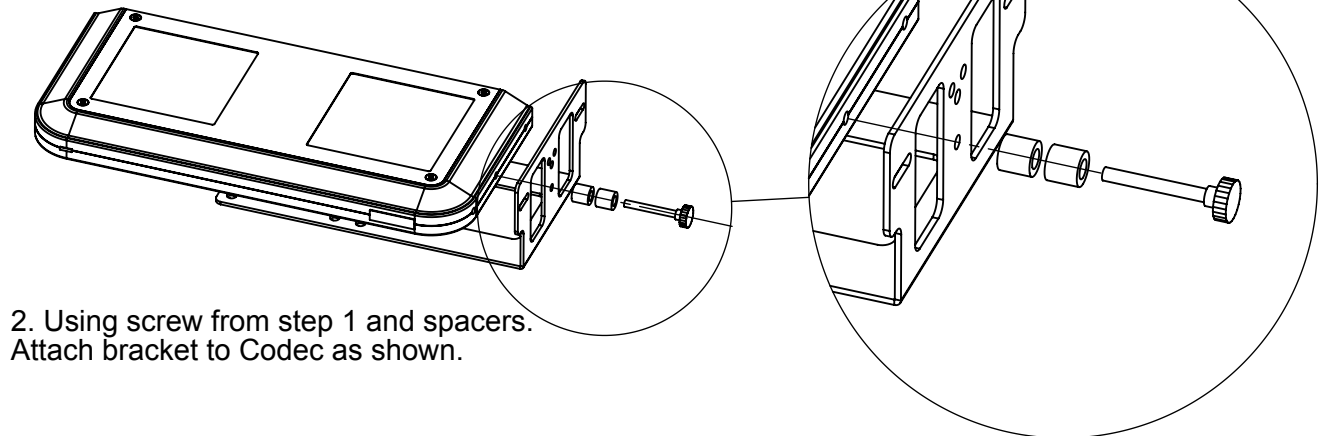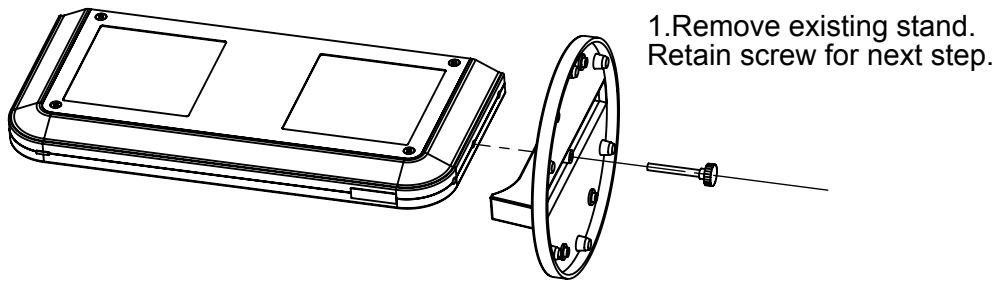

Attaching Polycom HDX / Tandberg Codec

