## **Assembly Instructions**




## **Top Rear Removable**

The Top Rear Removable Panel is intended to be mounted in a wedge position or as flat work surface. Instructions apply for the following Podiums: PD3001, PD3002, PD3007, PD3006.


Note: If you cannot understand these instructions or are concerned about safety of the installation contact a qualified contractor or contact AVFI at 1-877-834-3876

## Supplied Hardware Tools required #6-1/2" Screw Female Push Fit Male Push Fit (16) fastener (4) fastener (4)

Remove Top rear panel by loosen up the 4 cam connectors from underneath.

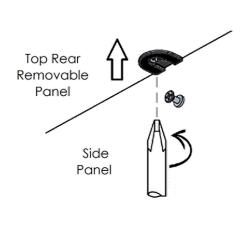

2 Screw Female and Male connectors into the pilot holes provided on both sides as shown below for wedge position.

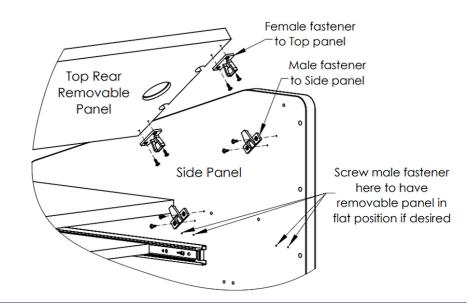

Push evenly by holding the panel from the grommet holes. The fasteners will lock together. Pull in the same manner to remove the panel.

Note: Panel can also be removed by pushing up from the inside if there are special cuts or if devices cover the grommet holes.

