


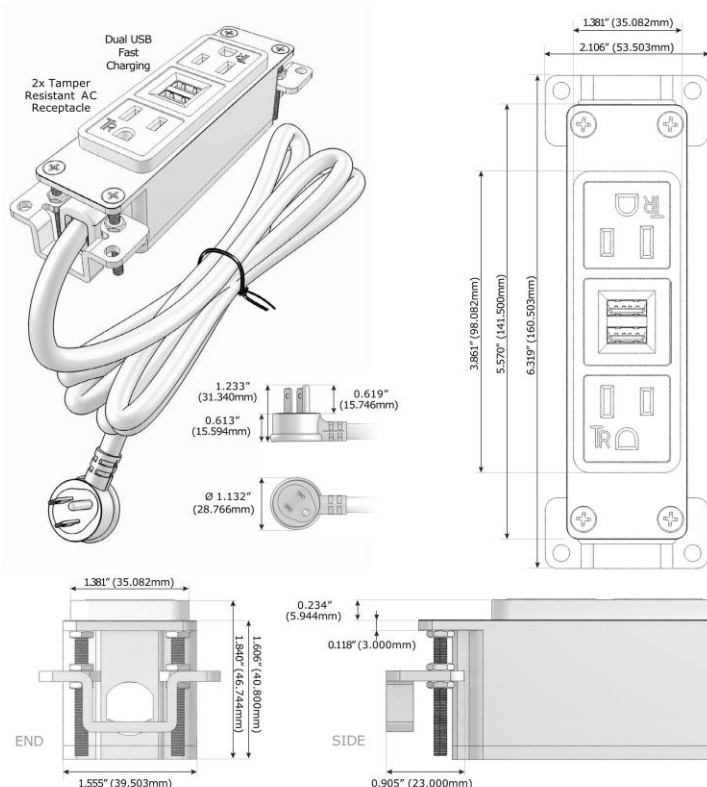

UL
LISTED
E491161
FURNITURE POWER DISTRIBUTION UNIT



P.1

Installation Guide

1 Hole on Top



Rout/cut top of wood/stone/etc. for outlet bezel as indicated on the cutout template labeled "TOP TEMPLATE".

2 Hole on Bottom



Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on the cutout template labeled "BOTTOM TEMPLATE".

3 Install Panel



Insert outlet from bottom, and adjust nuts above and below both mounting brackets so that


the top of the Power Panel is flush with the wood/stone/etc. as shown.

NOTE: Max Torque Force when tightening nuts is: 0.4 N.cm ~ 0.6 N.cm

4 Secure Screws




Use 3/4" screws (not provided) to fasten the brackets in place.

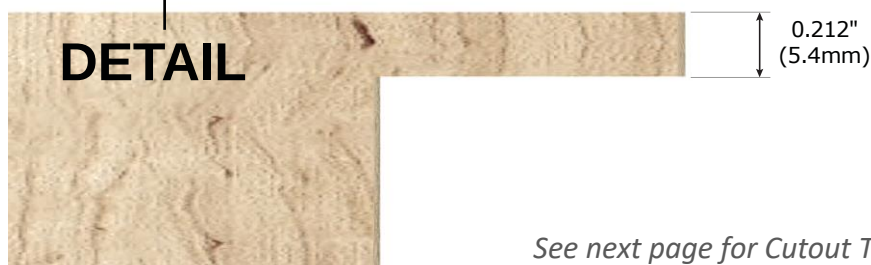

See next page for Cutout Template.

TOP TEMPLATE

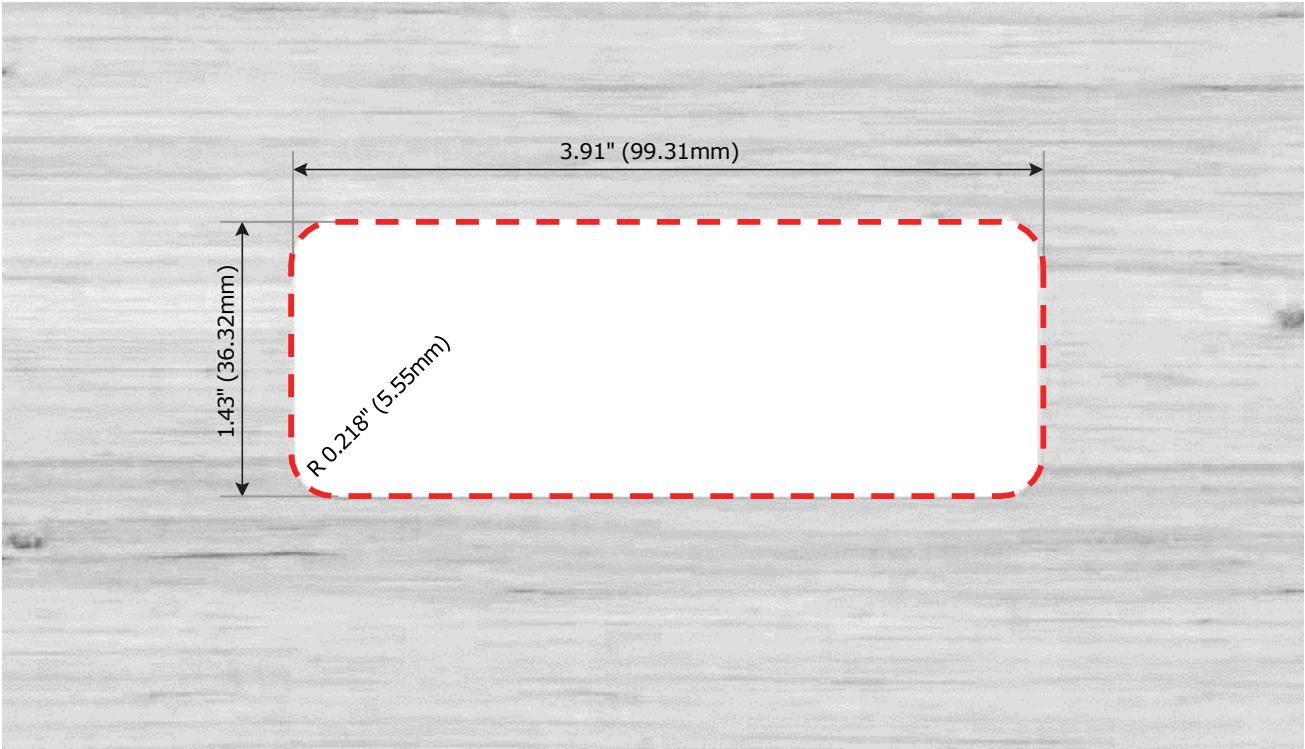

BOTTOM TEMPLATE

