



ModuDesk Modular Table Series

Instructions.

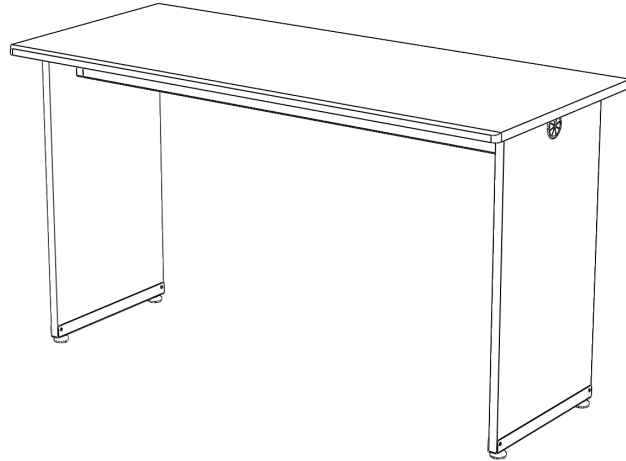

Sections

Instructions Summary:

1. Fasteners.
2. Accessories.
3. Assembly.

Tools you will need:

1. Philips Head Driver – PH2



2. 5mm & 4mm Allen Key



3. Drill (Recommended)




4. Hammer



ModuDesk Modular Table Series

Part Check List Per Unit (Items Labeled)

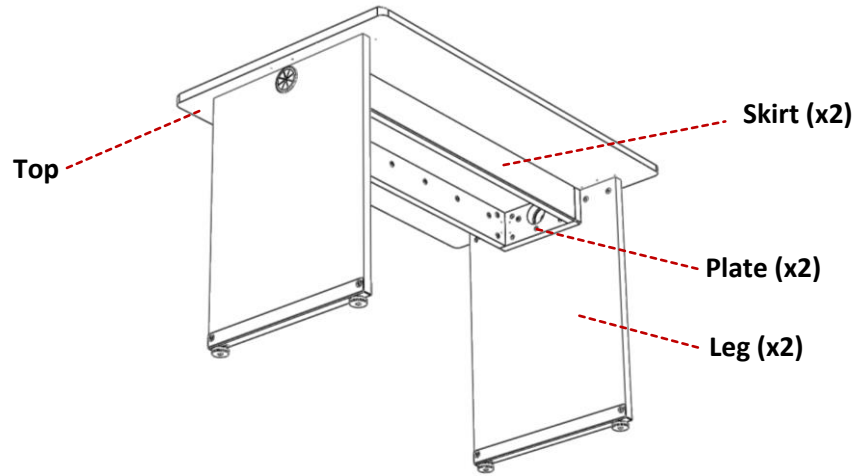

	A	B	C	D	E	F	G	H	I	J
1	MODUDESK CHECKLIST									
2	Configuration Equation									
3		TOP	SKIRT x2	LEG x2	PLATES	ADD-ONS	ADD-ONS	ADD-ONS	ADD-ONS	
4	MOD2928-A	AJ	A	29 10U	2	10U RACKS	29 DOORS	X2 OVERLAY HINGES per door		
5	MOD2935-B	BK	A	29 10U	2	10U RACKS	29 DOORS	X2 OVERLAY HINGES per door		
6	MOD2935-C	CL	B	29 BASIC	2	-				
7	MOD2945-D	DM	B	29 BASIC	2	-				
8	MOD2945-E	EN	C	29 BASIC	2	-				
9	MOD2955-F	FO	C	29 BASIC	2	-				
10	MOD2955-G	GP	D	29 BASIC	2	-				
11	MOD2965-H	HQ	E	29 BASIC	2	-				
12	MOD2965-I	IR	E	29 BASIC	2	-				
13	MOD2928-J	AJ	A	37 14U	2	14U RACKS	37 DOORS	X2 OVERLAY HINGES per door		
14	MOD2935-K	BK	A	37 14U	2	14U RACKS	37 DOORS	X2 OVERLAY HINGES per door		
15	MOD2935-L	CL	B	37 BASIC	2	-				
16	MOD2945-M	DM	B	37 BASIC	2	-				
17	MOD2945-N	EN	C	37 BASIC	2	-				
18	MOD2955-O	FO	C	37 BASIC	2	-				
19	MOD2955-P	GP	D	37 BASIC	2	-				
20	MOD2965-Q	HQ	E	37 BASIC	2	-				
21	MOD2965-R	IR	E	37 BASIC	2	-				
22	MOD2969-S	SV	C	29 BASIC	2	-				
23	MOD2977-T	TU	D	29 BASIC	2	-				
24	MOD2977-U	TU	D	37 BASIC	2	-				
25	MOD2969-V	SV	C	37 BASIC	2	-				
26	MOD2966-W	WY	C	29 BASIC	2	-				
27	MOD2982-X	XZ	D	29 BASIC	2	-				
28	MOD2966-Y	WY	C	37 BASIC	2	-				
29	MOD2982-Z	XZ	D	37 BASIC	2	-				
30	MOD2965-00	IR	A + A	29 10U	4	10U RACKS	29 DOORS	X2 OVERLAY HINGES per door		
31	MOD2965-01	HQ	C + A	(1) 29 BASIC + (2) 29 10U	4	10U RACKS	MODU-P2	MOD-LS	29 DOORS	
32	MOD2956-02	56-02	-	29 BASIC	-	-				
33										
34	MODU-P1									
35	MODU-P2									
36	MODU-P3									
37	MODU-P4									
38										
39	MOD-LS					X4 CORNER BRACKETS				
40	MOD-CC					X2 OVERLAY HINGES per door				
41	MOD-SC					X4 MOUNTING PLATES				
42	MOD-RC					X4 MOUNTING PLATES				
43	MODU-EXT					X2 BLIND CORNER HINGES per door				

ModuDesk Modular Table Series

- 1 Fasteners:**
Standard ModuDesk
 X34 Metal Dowel Pins
 X34 20mm Cams
 X12 Wooden Dowels
 X10 8x 1.5" Wood screws
 X16 8x 0.75" Pan Head Screws (+4 for Mounting Plates)
 X4 JCN 1/4-20x17mm Bolt
 X4 JCN 1/4-20x17mm Cap

Optional Modesty Panel: ModuP1-4 (only P4 gets extra bracket)

- X6 (+3 for extra bracket) 8x 1" Wood Screw
 X6 (+3 for extra bracket) 8x 0.75" Pan Head

Optional ModuDesk Rack (29 or 37)

- X2 Rack Doors
 X4 Blum Hinge (Standard)
 X2 Door Extensions + x4 Blind Corner Hinge (Optional)
 X4 Rack Rails: 10U (for 29) or 14U (for 37)
 X2 Door Locks with Keys

Optional Cable Cover: MOD-CC

- X2 Slim Doors
 X2 Blum Hinge (Standard)

Optional Round Corner: MOD-RC


- X1 Round Corner Panel
 X16 8x1" Pan head Screw

Optional Lower Shelf: MOD-LS

- X1 Shelf
 X4 Small L-Brackets
 X4 8x 0.75" Pan Head Screw

Optional Square Corner: MOD-SC

- X1 Square Corner Panel
 X16 8x1" Pan head Screw




20mm
cam



Metal
Dowel
Pins




1.5"
Wood
Screw

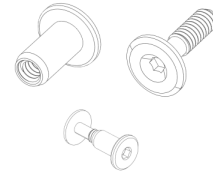


JCN Bolt
+ Cap



8 x 0.75"
Pan Head
Screw



8 x 1"
Wood
Screw




Wood
Dowel


2 Hardware:




(x5) 2.375"
Grommet

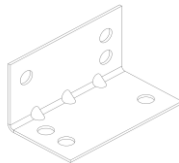


(x4) Small L-Brackets

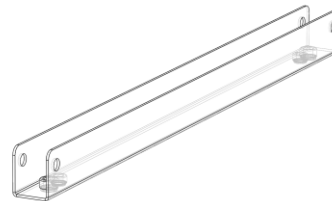


(x2) Channel Base-Cap

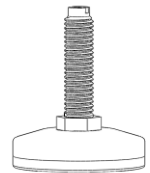

(x4) 3/8 Base Levelers

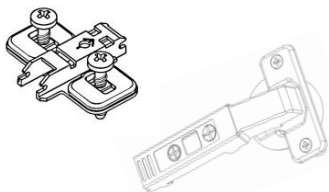


(x2) Blind Corner Hinges
Include with all Rack Units

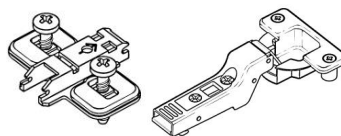

(x2) 107 Hinges
Include with MOD-CC



(x2-3) Large L Brackets
Only included with
Modesty Panel

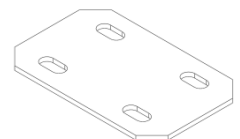

(x2) Mounting Plates
(x4) for MOD-RC or MOD-SC


ModuDesk Modular Table Series

3

STEP 1

- How to connect tables



Connect tables using Mount Plates before attaching legs

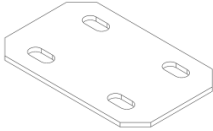

Mounting Plate



8 x .75" Pan Head Screw

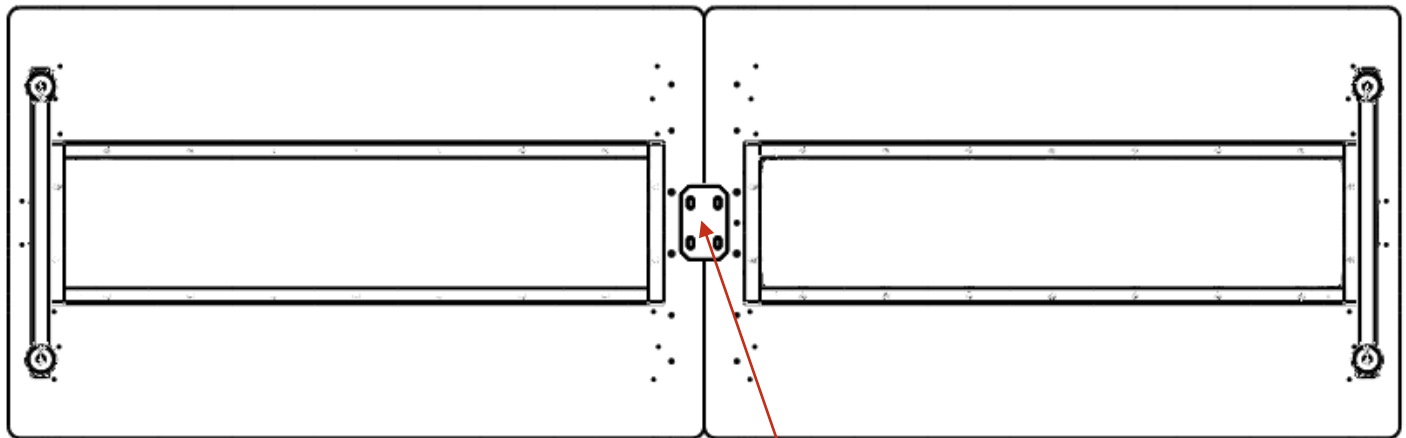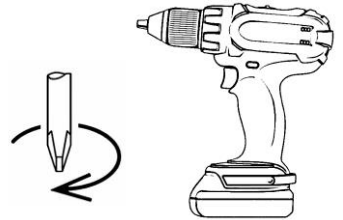


Mounting Plate

ModuDesk Modular Table Series

3

STEP 2



- Depending on chosen base, screw in Levelers or Caster Stems into Extrusion (Casters will pop on with force)
- Fasten the JCN Bolt and Cap together, through the extrusion and panel, securing everything in place.

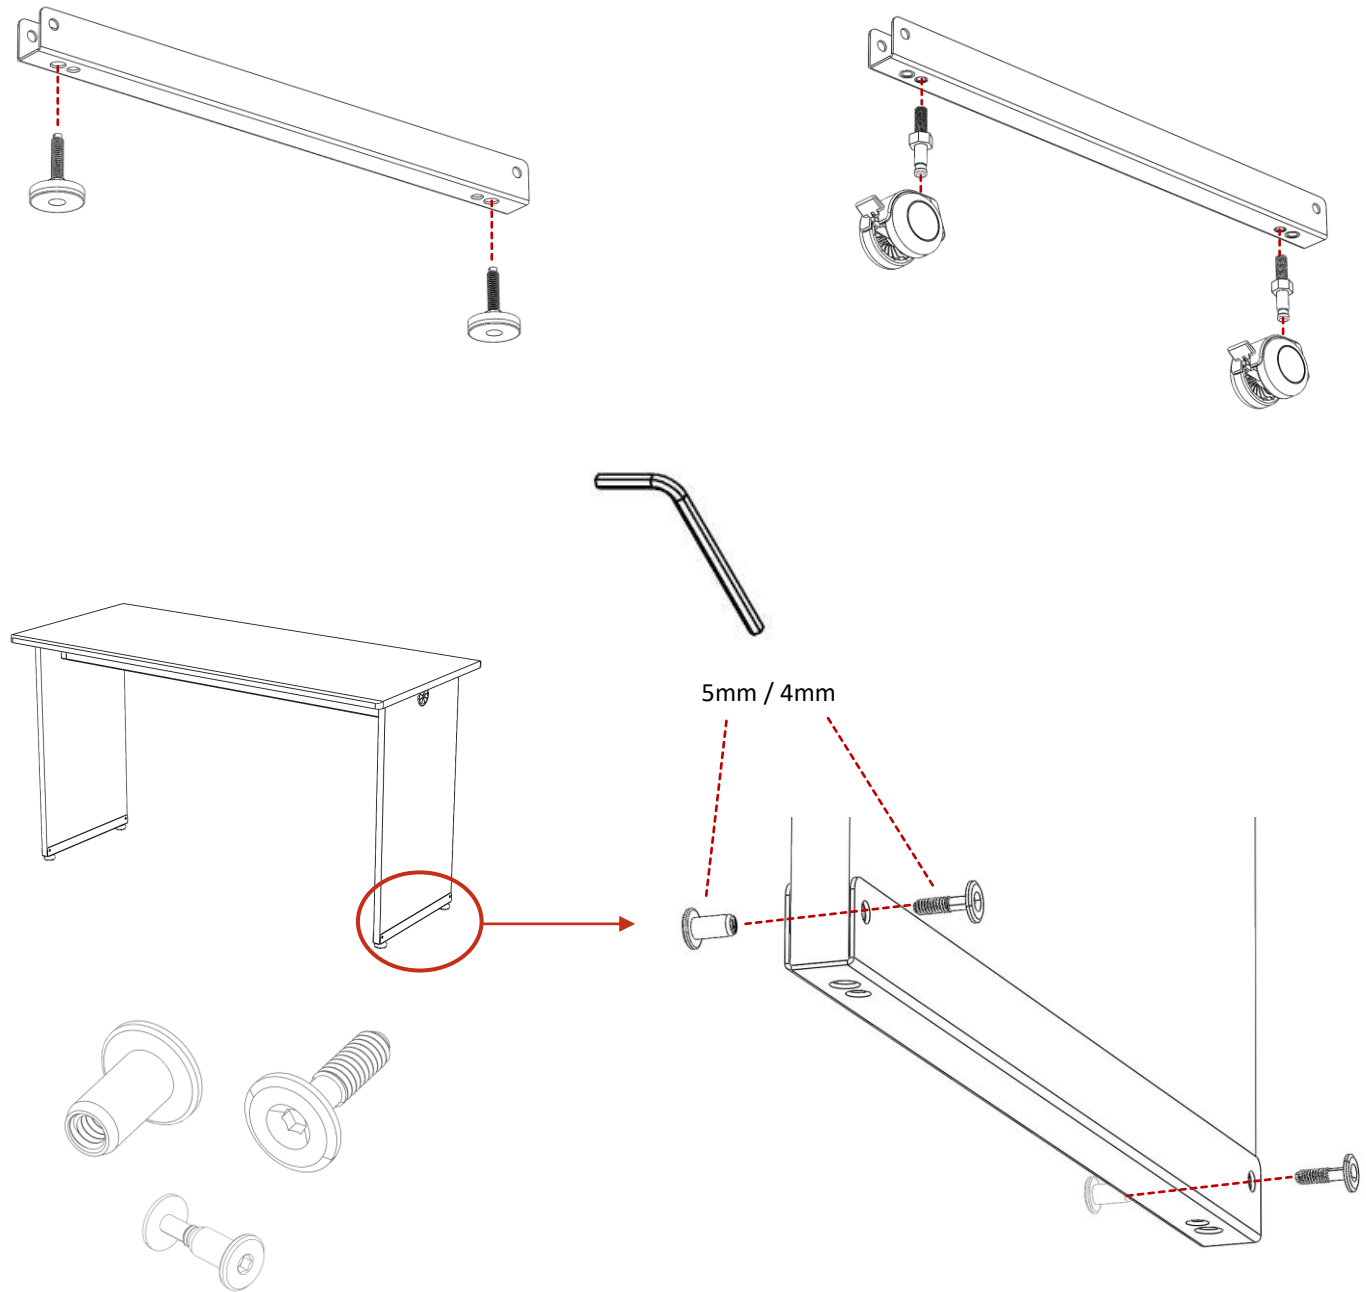

JCN Bolt + Cap

3 STEP 3

- Screw in Dowels, Place Cams, and Combine Panels
- Screw in x5 1.5" Wood Screws per side for extra strength

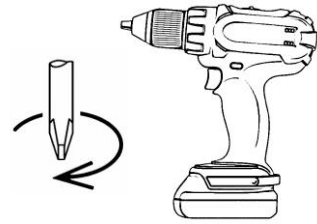


ModuDesk Modular Table Series

3

For MOD-CC

For MOD-CC (Cable Cover):

To insert both Hinge and Plates, Hammer and fasten them into the locations using the screws that arrive with the hinges.

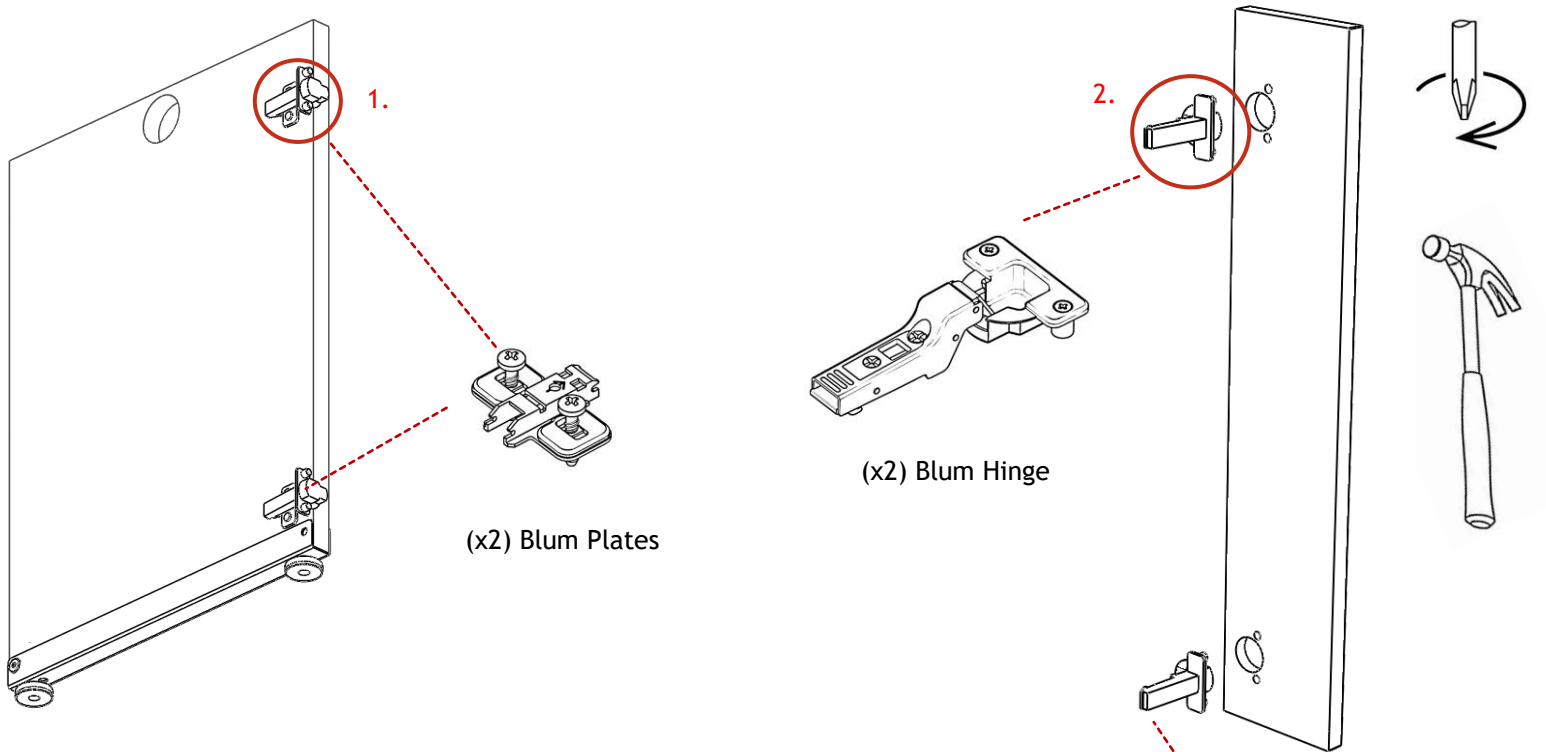


3. To attach Hinge + Plates, simply clip them together, no special tools required.

4.

Three-dimensional adjustment

Side adjustment

Turn front screw to increase or decrease door overlay (+/-2mm).

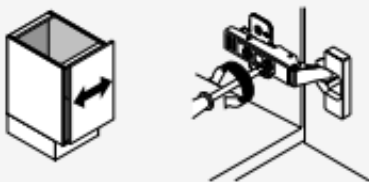

Height adjustment

Rotate cam Screw-on mounting plate to adjust door position (+/-2mm).



On non-cam mounting plates, loosen screw, adjust door and retighten screws.

Depth adjustment

Turn rear spiral-tech cam screw to adjust door position (+3mm, -2mm).



For CLIP, loosen rear screw, adjust and retighten.

ModuDesk Modular Table Series


3

For MOD-P(1-4)


- **IMPORTANT** use 8x.75" Pan Head Screw to mount L-Bracket onto Modesty Panel



8 x .75"
Pan
Head
Screw

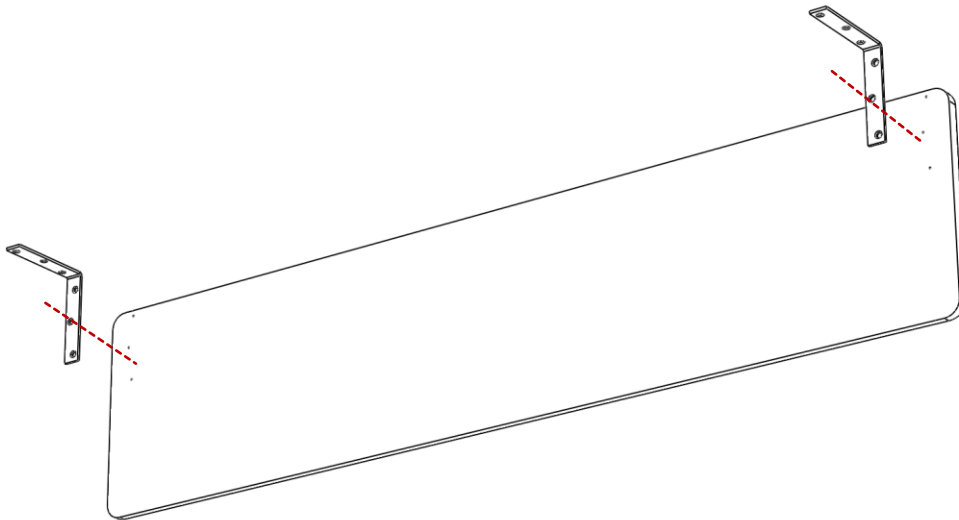

- **IMPORTANT** use 8x1" Pan Head Screw to mount L-Bracket onto Modesty Panel

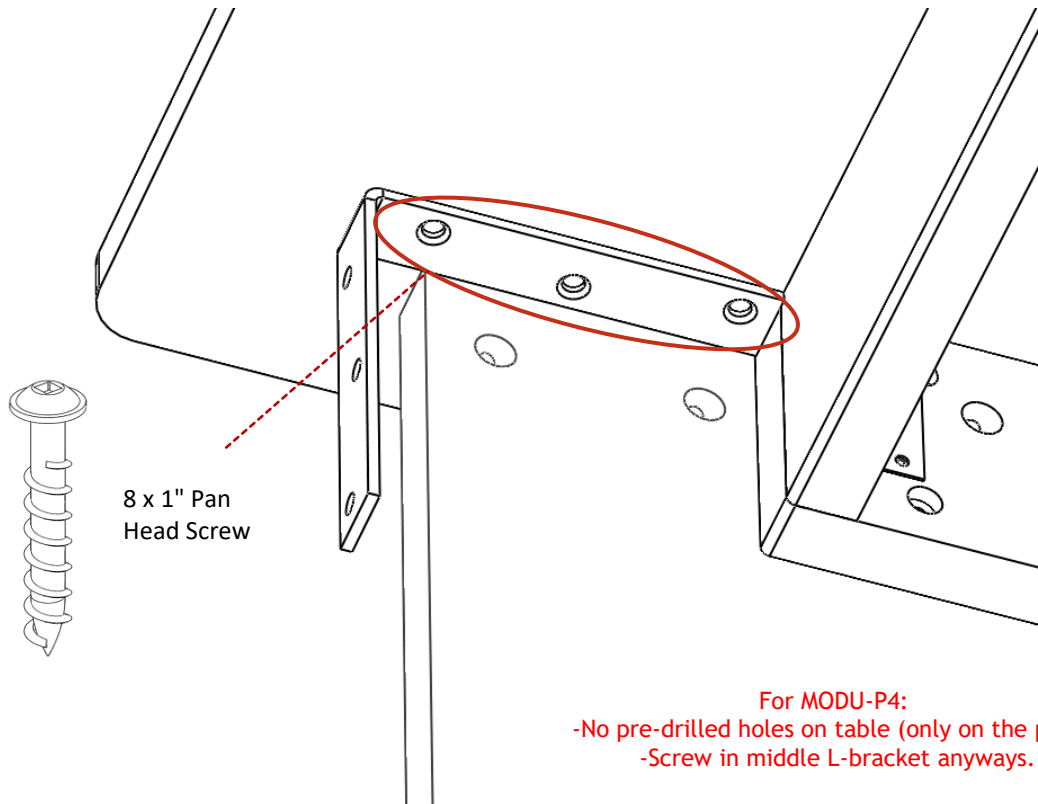






For MODU-P4:

- No pre-drilled holes on table (only on the panel)
- Screw in middle L-bracket anyways.

ModuDesk Modular Table Series

3

For MOD-RC or MOD-SC

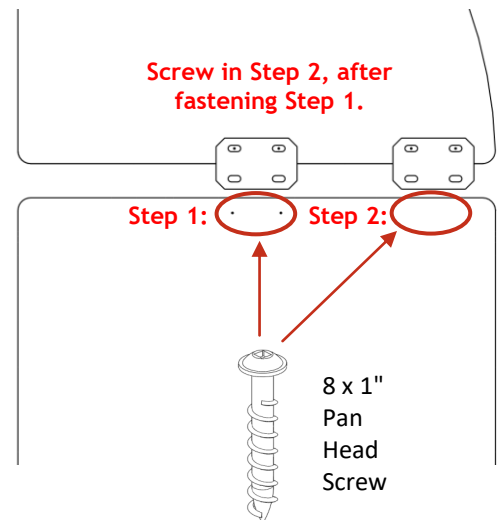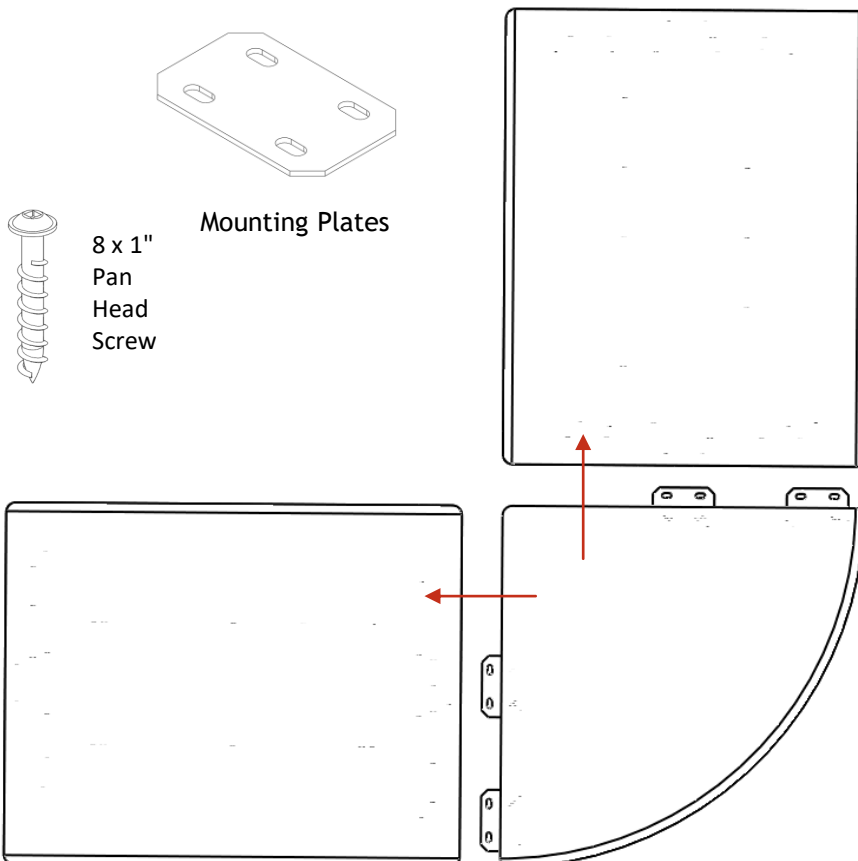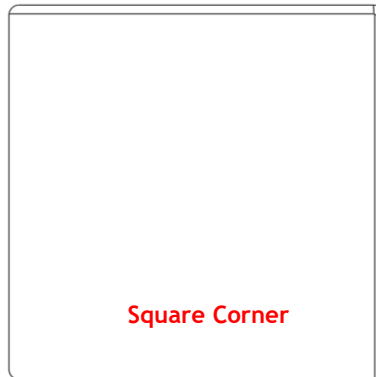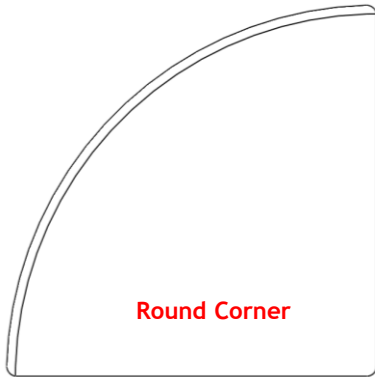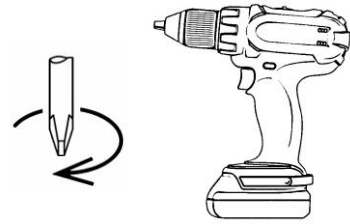

There will be no pre-drilled
holes in step 2 location,
screw in anyways.

ModuDesk Modular Table Series

3

Complete!

